

Flange pressure reducing valve Stainless steel type DM07 / DM08



Description:

Flange-pressure-reducing valves are used in pipeline systems in order to equalize different pressures at the incoming side of the pressure reducing valve, and not to exceed a specific pressure at the outgoing side of the valve.

Features:

- suitable for neutral and not neutral and not adhesive gaseous & liquid media
- Industrial design full metal
- Built-in dirt trap
- Manometer gauge connection G 1/4" inch
- Installation possible in any position

Delivery without manometer

Diameter:

DN15 - DN100

Temperature:

-20°C to +120°C / no steam

Pressure:

Inlet pressure: to 40,0 bar Outlet pressure: 0,5 bar – 15,0 bar- depending on desing

Material:

Type DM07 & DM08

Parts	Material	DIN EN	ASME
Body	Stainless steel	1.4408	CF8M
Internals	Stainless steel	1.4408	CF8M
Spring	Spring steel	1.1200	ASTM A228

Seal / diaphragm:

EPDM	Ethylene-propylene-diene	0,5 bar – 15,0 bar	-20°C to +120°C
FKM	Fluorocarbon	0,5 bar – 15,0 bar	-10°C to +120°C

Approvals

- European pressure equipment directive - ACS - Germanischer Lloyd GL

GOST-R
 DVGW
 Lloyd's Register EMEA LR EMEA
 DGR 2014/68/EU
 WRAS
 American Bureau of Shipping ABS

- Bureau Veritas BV

Manometer connection:

Up to DN50 1 connection axial G 1/4" inch for outlet pressure

From DN65 2 connections radial G 1/4" inch for in- and outlet pressure


DN100 2 connections axial G 1/4" inch for in- and outlet pressure

Datasheet



Dimensions:

Diameter DN	15	20	25	32	40	50	65	80	100
Inlet Flange	15	20	25	32	40	50	65	80	100
Outlet Flange	15	20	25	32	40	50	65	80	100
Flange PN	40	40	40	40	40	40	40	40	16
L	130	150	160	180	200	230	290	310	350
D	95	105	115	140	150	165	185	200	220
Н	102	130	130	130	165	165	235	235	320
H1	128	150	150	150	185	185	235	235	320
h	46	50	55	68	73	80	89	96	112
KVs-value m3/h	3	5,8	6,7	7,6	12,5	15	40	50	80
weight kg	2,9	4,3	4,7	5,9	9,1	10,9	19	20,5	37,0
Inlet pressure LP	25 bar								
Inlet pres. HP, SP	40 bar	40 bar	40 bar	16 bar					
Outlet pressure in bar LP –Version	05.20	05.20	05.20	05.20	05.20	0.5. 2.0			
SP – Version HP - Version	0,5 - 2,0 1,0 - 8,0 5,0 - 15,0	1,0 - 8,0	1,0 - 8,0	1,0 - 8,0 5,0 - 13,0					
Pressure gauge connection Inlet pressure							1/4" radial	1/4" radial	1/4" axial
Pressure gauge connection Outlet pressure	1/4" axial	1/4" radial	1/4" radial	1/4" axial					

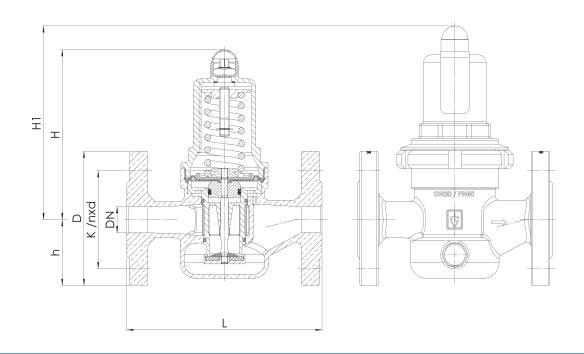

Dirt trap:

Mesh size: DN15 - DN32: 0,60 mm

DN40 - DN100: 0,75 mm



Installation and Assembly:

The pressure reducer is set at the factory to a secondary pressure of 3 bar (in standard version) and is to be installed in the pipe without applying stress. After the reducer we recommend to consider a slow downsection of $5 \times D$. The flow direction must coincide with the arrow on the housing. The valve can be installed in any mounting position. The pipe must be thoroughly flushed prior to installation of the pressure reducer to prevent impurities picked up by the medium having an impact on the satisfactory operation. The pressure gauges are screwed into the sockets using hempor gasket strip and indicate the prevailing secondary pressure or the prevailing primary and secondary pressure (DN 65 and DN 80). The desired secondary pressure is set by turning the adjusting spindle at idle pressure (zero consumption).

Turning the adjusting spindle in clockwise direction increasesthe secondary pressure and turning the spindle in counter-clockwise direction reduces the secondary pressure. During this adjustment always observe that, based on pressure and fric- tion losses, the end pressure adjusted at zero consumption is reduced further when drawing water, in dependence of the quantity drawn off. The set desired value can be checked at the pressure gauge arranged on the secondary pressure side.



Before commissioning the pressure reducer, it should be ensured that both pressure gauge connections on the housing are sealed with pressure gauges or sealing plugs

Maintenance:

The device should be checked at intervals which correspond to the respective operating conditions in order to eliminate any faulty operation which may be caused by impurities, scaling and natural wear. After long periods of non-use the function of the valve must be tested. The operating or installation company must carry out an annual inspection according to DIN 1988-8


Replacing the Valve insert:


Design **SP-Version** (Pressure 1 to 8 bar) / **HP Version** (Pressure 5 to 15 bar)

- 1. Remove plastic protective cap; loosen counter-nut
- 2. Tension spring by turning the setting spindle counter-clockwise
- 3. Unscrew spring housing or remove screws
- 4. Remove spring housing, spring plate, setting spindle, copper ring and spring.
- 5. By means of 2 screwdrivers lever-out the complete valve insert (fig. a) and replace with a new one. In the case of DN65 and DN80 re-fit two screws on opposite sides of the body, as these are required as supports for the screwdrivers (fig. b)
- 6. Installation is carried-out in reverse order. In the case of DN65 /DN80 tighten the screws to a maximum equal torque of 18 Nm, this must not to be exceeded!

Abb. A): Removal and installation of control unit



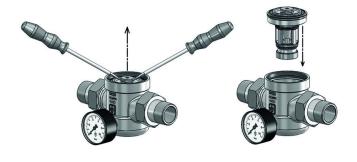

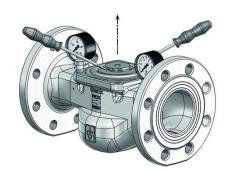



Design **LP-Version** (Pressure 0,5 to 2 bar)

- 1. Remove plastic cap, release lock nut (do not unscrew!)
- 2. De-tension the spring by turning the setting spindle clockwise.
- 3. Release and unscrew bonnet with open end spanner
- 4. Remove spring and slide ring
- 5. Release and unscrew hexagon nuts with open end spanner and screwdriver (fig. c)
- 6. Remove spring seat
- 7. Loosen membranes on the outer figmeter along entire length with a screwdriver and unscrew (fig. d)
- 8. Loosen and unscrew low-pressure adapter with hook spanner (optional accessory) (fig. e)
- 9. Remove O-ring seal
- 10. Screw the hexagon nuts back onto the threaded bolts. Position two screwdrivers (used as lever) on the housing and in the groove of the hexagon nut, and pull out the valve insert (Fig. f)
- 11. To assemble, repeat the sequence in reverse order (see Fig. g).







Illustration E

Illustration F



Illustration G






Performance table


Dimensioning by pressure loss on the outlet pressure side

Flow chart water

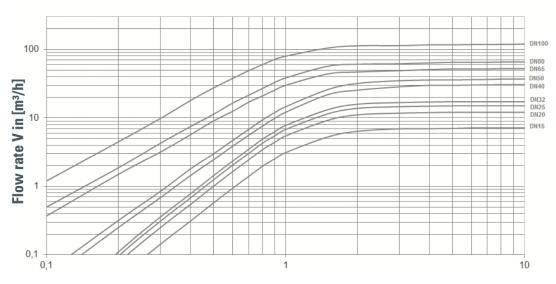

Pressure drop delta p [bar]

Dimensioning by flow velocity

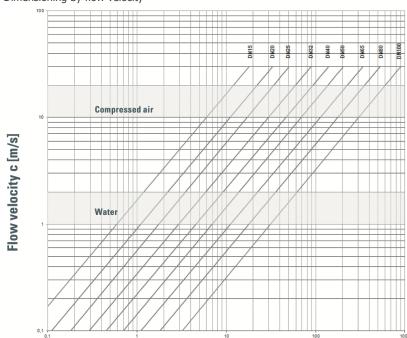

Flow volume V [m³/h]

For liquids:

With help of the chart you can determine the nominal diameter (DN) for a given flow volume V (m3/h). According to DVGW-guidelines (DIN 1988) a flow velocity of 2 m/s in domestic water supply systems should not be exceeded.

For compressed air and other gaseous media:

The usual flow velocity for compressed air is 10 - 20 m/s. For gaseous media the flow volume V should always be shown in actual cubic meters/hour. If the flow volume is given in standard cubic meters, these should be converted into actual cubic meters before using the diagram.

$$V(m^3/h) = \frac{V_{\text{Norm}}(Nm^3/h)}{p_{\text{absolut}}(bar)} = \frac{V_{\text{Norm}}}{p_0+1}$$



Article number:

Parts Type DM07 **Type DM08** Body Stainless steel Stainless steel Internals Stainless steel Stainless steel Seal **EPDM**

Туре	Outlet pressure	Connection	Size
DM07	01 – LP 0,5 up to 2,0 bar	00 - flange PN40**	03 – DN15
DM08	02 – SP 1,0 up to 8,0 bar		04 - DN20
	03 - HP 5,0 up to 15,0 bar***		05 – DN25
			06 – DN32
			07 - DN40
			08 - DN50
			09 – DN65*
			10 - DN80*
			11 - DN100***

^{*}Sizes DN65 and DN80 are only available with SP-version. **Size DN100 only in PN16 available

Example No. DM08030004:

DM08 03 00 04

Pressure reducing valve made of stainless steel with FKM seal

Outlet pressure: 5,0 up to 15,0 bar (HP version)

Connection: flange PN40 Size: DN20

Image similar, subject change without notice.

Fon: +49 7143/96669-00 Index: 09/2021 info@nieruf.com www.nieruf.com

^{***}Outlet pressure of DN100 5,0 up to 13,0 bar, version with piston.